




VHB MH Module

Installation Guide



3


72 hours

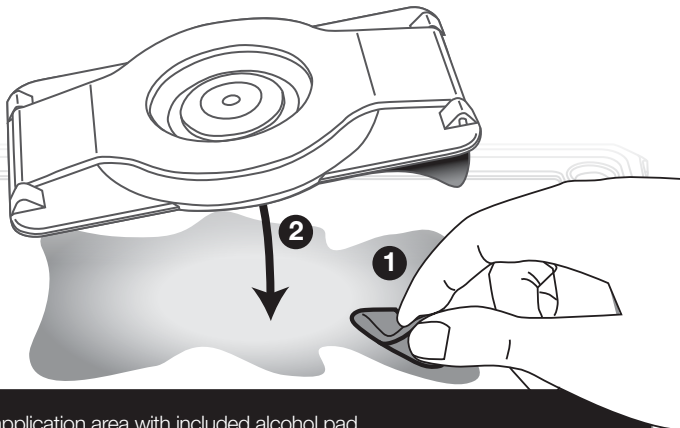

1. Clean the application area with included alcohol pad.
2. Remove backing from adhesive pad and carefully apply Module to desired application area. We recommend placing the MagConnect Module in the center of application area.
3. Allow adhesive to cure for 72 hours prior to use.

Applications

Hand Strap

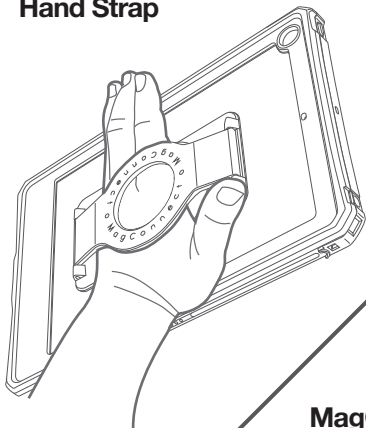

**MagConnect
Mount
Compatible**

